

Р7

(He) Hebrew:



b. Input the desired username and password

• Password must be between 8-31 characters

• Do not input a previously used name.

consisting only of letters and digits.


and click on "Submit".

 $\label{lem:continuous} \mbox{ After successful registration to the service, the camera must be plugged in power. Please \\$

a. Click on "Register now".

3 Add your camera/s

follow the in-app guide to add the camera.

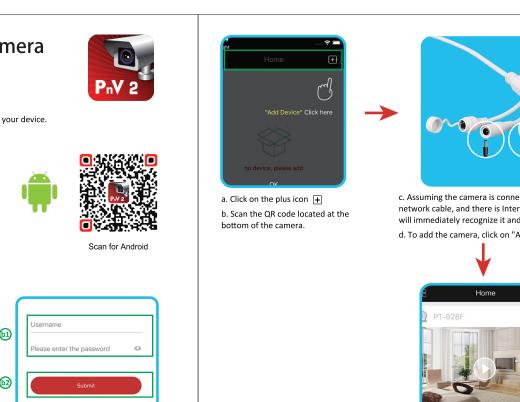


wireless setting procedure.




The camera will prompt: "Wireless setup is waiting". (this installation is not supported by cameras

After scanning the QR code located at the bottom of the camera, the app will go directly to the

a. Accept "The above preparations have b.The wireless network the smartphone is been completed" and click "Next". connected to, will be displayed. Please enter the password of The wireless network and click "OK". c. A pop-up message will ask you to confirm the 26861408 password. Click "Confirm it" to continue. Please check WiFi password Make sure that the smartphone is connected to the wireless network to which you want the camera 26861408 to connect to (5G networks are not supported). • Make sure that there are no Bluetooth devices or earphones connected to the smartphone. • Make sure the smartphone's speaker volume is at maximum and within up to 3 meters from the d. The app will start the camera sync process. If everything is intact, the camera will prompt: "Wireless is connecting, please wait". e. If the camera has synced wirelessly, it will prompt: "Wireless connection success". At this point, you can either wait for the app to finish the binding process or click "Bind directly": enter the default camera's password (888888) and click on "Add it". f. If the process is successful, the app will ask to add the camera. Click on "Add it". g. After the camera is added, the app will return to the main screen, and the camera will be available for viewing by clicking the " $\begin{tabular}{|l|l|l|l|} \hline \end{tabular}$ button. • If the process fails, please reset the camera to factory default and repeat the process. • If it keeps failing, reset the camera to factory default, connect the network cable, and add the camera. You can set the WiFi connection within the camera settings later. • The reset button is located on the bottom of the camera's eyeball. Lift the camera's lens (please

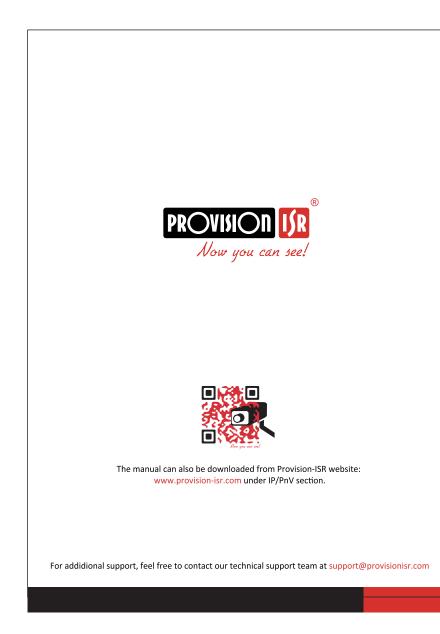

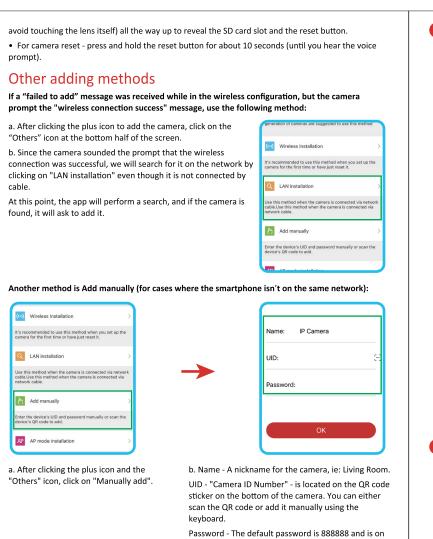

the QR code sticker.

