

Enabling Analytics in IP Cameras:

Provision-ISR is delighted to release the newly added video analytics.

This includes:

- 1) Camera Tampering
- 2) Line crossing
- 3) Sterile Area
- 4) Object Monitoring

Analytics can be enabled only on 5MP IP Cameras from “Eye-Sight” Series running v4.x and up.

The model names are xxx-25xIP5yyy.

Steps for enabling analytics:

- 1) Download the compressed file containing all the necessary files for this process by clicking [here](#).
- 2) Extract all the files from the downloaded file.
- 3) Update the IPC to the latest version (4.2.1.0(16686)) using the file “v4.2.1 for 5MP IPC Eye-Sight Series.tar”.
- 4) Run the program “analytics Tool.exe”
- 5) Browse and select the profile “8MP Eye-Sight 4.1.3 20170623 Full analytics.fac”

Select a profile


- 6) Choose from the list all the cameras **from the same model**.
Please note: setting the wrong camera model with the wrong profile might cause the camera to malfunction.

- 7) Choose from the “Product Type” Drop-down list the correct camera model.


For example: If you chose I4-250IP5VF for enabling the analytics,

00:18:AE:68:DD:79 I4-250IP5VF I4-250IP5VF 4.2.1.0(1668)

you should choose I4-250IP5VF from the “Product Type” List.

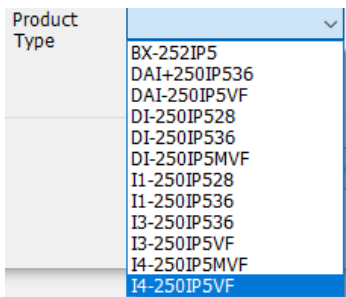

- 8) Click on “Set default configuration”. The camera will reboot automatically. **All settings and configuration will be restored to factory default.**
- 9) After the restart, Analytics will be enabled in the camera configuration menu.

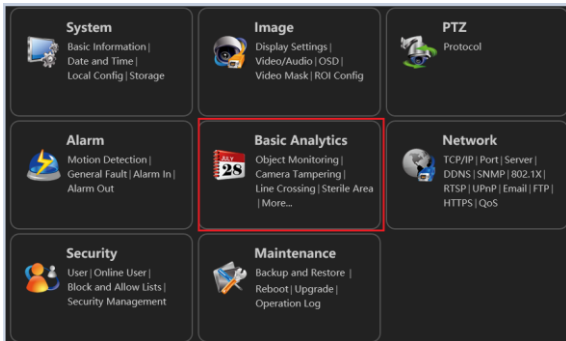



Now you can see!

Please feel free to contact our technical team with any question, concern or technical feedback.

Best Regards,
Provision-ISR Technical Department.