

Enabling Analytics in IP Cameras - Eye-Sight 5MP Models:

Provision-ISR is delighted to release the newly added video analytics.

This includes:

- 1) Face Detection
- 2) Camera Tampering
- 3) Line crossing
- 4) Sterile Area
- 5) Object Monitoring
- 6) Crowded gathering
- 7) People counting
- 8) People intrusion

Analytics can be enabled only on 5MP IP Cameras from “Eye-Sight” Series running v4.x and up. The model names are xxx-25xIP5yyy.

Steps for enabling analytics:

- 1) Download the compressed file containing all the necessary files for this process from: [Here](#)
- 2) Extract all the files from the downloaded file.
- 3) Update the IPC to the latest version (v4.3.0.0(20959)
Using the file “5MP Eye-sight 4.3.0.0(20959)20190105.tar”.
- 4) Run the program “analytics Tool.exe”
- 5) Browse and select the profile “5MP Eye-sight v4.3.0 20185.fac”


Select a profile

- 6) Choose from the list all the cameras **from the same model**. **Please note:** setting the wrong camera model with the wrong profile might cause the camera to malfunction.
- 7) Choose from the “Product Type” Drop-down list the correct camera model.

For example: If you chose I4-250IP5MVF for enabling the analytics,


74:F8:DB:56:5C:47 I4-250IP5MVF I4-250IP5MVF 4.3.0.0(20959)

You should choose I4-250IP5VF from the “Product Type” List.

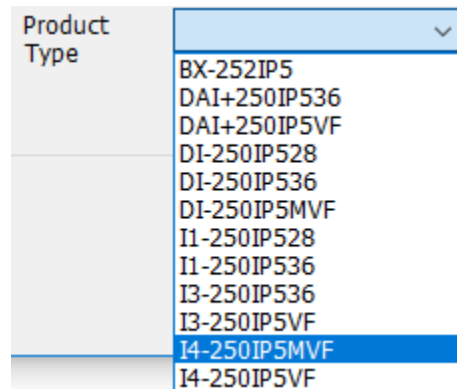

8) Click on “Set default configuration”. The camera will reboot automatically. **All settings and configuration will be restored to factory default.**

9) After the restart, Analytics will be enabled in the camera configuration menu.

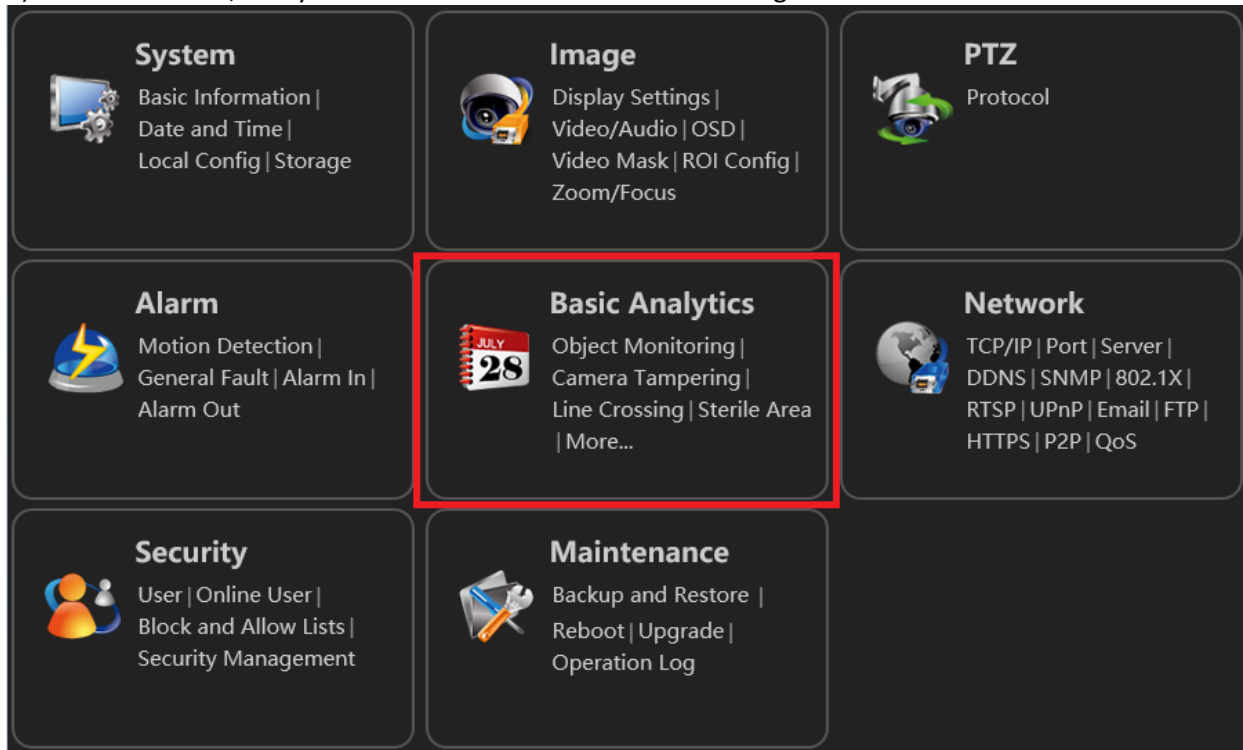

Please feel free to contact our technical team with any question, concern or technical feedback.

Best Regards,

Provision-ISR Technical Department.