

Upgrade instructions:

If your camera is running version **lower** than **v5.0.1.0(12314)**, please contact support@provisionisr.com

Please follow the steps below:

1. Download the [Latest Firmware Update](#).
2. Upgrade using web interface or [IP manager](#).

Kernel update:

The Kernel file will be in the downloaded .RAR file from previous step.

Use the [IP Manager](#) to update kernel, see [here](#) how.

Good luck,

Provision-ISR team